



## COMMERCIAL JUICER

For fresh-squeezed citrus juice that customers prefer.

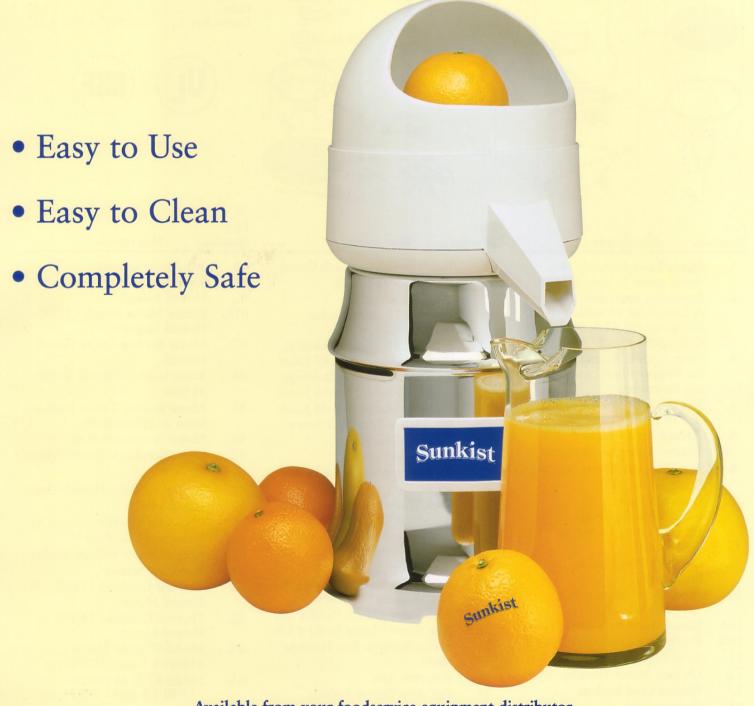

Available from your foodservice equipment distributor.

Contact us for the one nearest you: (800) 383-7141 or (909) 933-2160 • Fax (909) 933-2169 Foodservice Equipment Sales, Sunkist Growers • 720 East Sunkist Street, Ontario, CA 91761

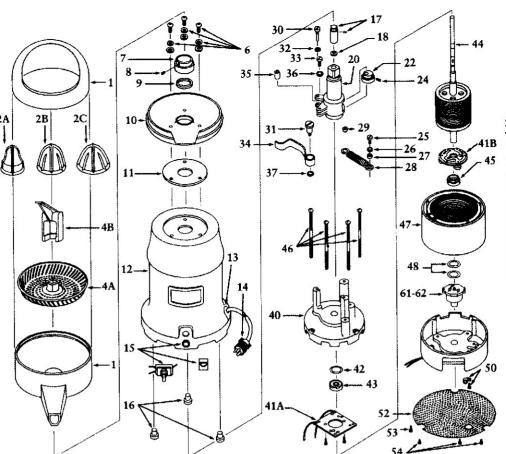

## Sunkist

## Commercial Juicer #8 Parts Information

Effective date May 1, 2000

## Specifications

Corrosion proof plastic.

Safe...Listed by Underwriters' Laboratories, Canadian Standards Association and NSF International.

Shipping weight 36 pounds
Net weight
Overall dimensions 17" high 8"diameter
Horsepower <sup>1</sup> / <sub>4</sub>
Cube
Carton Size 91/2" x 91/2" x 21"





Part	
Number	Description

- 1. Plastic Bowl Assembly incl. dome, spout & bowl support
- Extracting Bulbs Sets
   A. Lemon fits #8 model
   B. Orange fits #7 & #8 model
   C. Grapefruit fits #7 & #8 model
- 3. Lever Lock & Screws for Strainer (for #7 juicer not illustrated)
- 4. Strainer w/Lever Lock & Screws (for #7 juicer -not illustrated)
- 4A. Strainer for #8 juicer
- 4B. Strainer Puller for #8 juicer
- 6. Bowl Support Screws, Spacers, Washers (set of 3)
- 7. Umbrella Ring w/Set Screw & Gasket
- 8. Umbrella Ring Set Screw (incl'd w/#7)
- 9. Umbrella Ring Gasket (incl'd w/#7)
- 10. Plastic Bowl Support only (incl'd w/#1)
- 10A. Plastic Dome only (incl'd w/#1)
- 10B. Plastic Spout only (incl'd w/#1)
- 11. Bowl Support Gasket
- 12. Chrome Motor Housing
- 13. Rubber Cord Bushing
- 14. Rubber Cord
- 14A. Rubber Cord Export

rart	
Number	Description

- 15. Toggle Switch w/Switch Guard
- 16. Rubber Feet (set of 3)
- 17. Shaft Tip w/Pin
- 18. Eccentric Housing Gasket (incl'd w/#20)
- 20-7. Eccentric Housing w/Bearings, Gasket & Brass Tube #7 Juicer
- Eccentric Housing w/Bearings, Gasket & Brass Tube #8 Juicer
- 20-8C. Eccentric Mechanism #8 Juicer
- 22. Ecc. Hub w/Bearing & Screw
- 24. Ecc. Hub Hex Screw 1/4-20 x 1/2
- 25. Spring Screw to Motor Mount 10-32
- 26. Lock Washers (set of 4) includes #32, 36, 37
- 27. Bronze Bushing Coil Spring to Motor Mount 9/64 x 3/8 x 7/32
- 28. Coil Spring
- 29. Bronze Bushing Coil Spring to Ecc. Housing 9/64 x 3/8 x 3/16
- 30. Arm Screw Small 1/2-32 x 11/8
- 31. Arm Screw Large 1/4-20 x 11/8
- 33. Spring Screw to Ecc. Housing 1/4-32
- 34. Eccentric Arm
- 35. Ecc. Arm Bronze Bushing 11/2 x 3/16 x 5/16

Number	Description

Part

- 40. Top Motor Casting
- 41A. Stationary Motor Switch -Howell Motor
- 41B. Rotary Motor Switch 115V Howell Motor
- 43. Motor Bearing Top or Bottom Howell
- 44. Rotor (shaft) Howell Motor 115/60
- 45. Motor Bearing Top or Bottom Ohio (not illustrated)
- 46. Motor Screws (set of 4)
- 47. Stator (winding)- Howell Motor 115/60
- 48. Tension Washers Howell Motor includes #42
- 50. Cord Clip w/Screw
- 52. Perforated Base Plate
- 53. Ground Screw w/Lock Washer
- 54. Base Plate Screws
- 61. Thermal Overload 115/60 -Howell Motor
- 62. Thermal Overload 230/50 -Howell Motor
- 64. Model #7 or #8 Motor 115/60 4.3 amp 1750 rpm
- 65. Model #7 or #8 motor 230/50 2.5 amp 1425 rpm